

成品87*57mm 红色外框为刀模线

正面

反面

Random Lottery Number Generator

User Manual

Product Overview

This device provides two number selection modes: **Power Ball** and **Mega Millions**. The numbers generated are for entertainment purposes only and do not represent any official lottery results or winnings. This product does not support or promote any form of gambling.

Safety Notice

- This device is designed for personal entertainment and educational purposes only.
- Do not use the generated numbers for actual lottery participation or betting.
- Keep away from water, heat, and direct sunlight.
- Children should use this device under adult supervision.

Function Overview

The Random Number Selector allows users to randomly generate and save number combinations in two different modes. Each mode can store up to **five (5)** sets of generated numbers for later review.

Power On / Off Instructions

Power On:
When the screen is off, press any button to power on the device.

Power Off:
The device will automatically power off after 3 minutes of inactivity. No button operation is required.



Button Functions

Button 1 - Mode Selection

Switch freely between Power Ball and Mega Millions modes.

Button 2 - Select / Reselect

Press once to generate or reselect a random number set.

Button 3 - Save & Review

Press once: Save the currently displayed numbers. Each mode can store up to 5 sets of numbers. Press and hold for 1 second: Enter Record Review Mode to check saved numbers. Press and hold for 5 seconds: Erase all saved data in the current mode.

Maintenance & Storage

- Clean the exterior with a soft, dry cloth.
- Do not immerse in water or expose to excessive moisture.
- Remove batteries if the device will not be used for an extended period.
- Store in a cool, dry place.

Disclaimer

All numbers generated by this device are random and no practical value.